

Operation Manual

Emergency Combination System **ECS-6216MS**



* Rack mount products in the Western Hemisphere(North America, South America, and the Caribbean) do not have handles installed due to customer preference.

interM


Welcome

A personal welcome to you from the management and employees of Inter-M

All of the co-workers here at Inter-M are dedicated to providing excellent products with inherently good value, and we are delighted you have purchased one of our products.

We sincerely trust this product will provide years of satisfactory service, but if anything is not to your complete satisfaction, we will endeavor to make things right.

Welcome to Inter-M, and thank you for becoming part of our worldwide extended family!

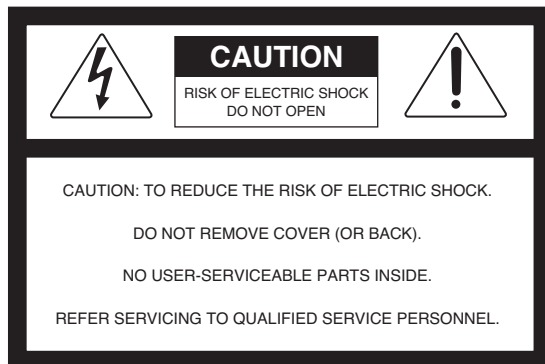

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

*WARNING FOR YOUR PROTECTION PLEASE READ THE FOLLOWING-WATER AND MOISTURE: Unit should not be used near water (e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc). Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

*Do not install this equipment in a confined space such as a book case or similar unit.

*This apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

*This apparatus shall be connected to a mains socket outlet with a protective earthing connection.

*It has to be easy to disconnect the device. To disconnect the device from power, separate AC input cable from inlet or unplug the AC Cord.

*The socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION

*These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

NOTE

*This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

Caution: To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Attentions: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant ou une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

Contents

Unpacking	2
Installation	
Environment.....	2
Important Safety Instructions.....	2
Features	3
Equipment Setup and Inspection	4
Front Panel	5
Rear Panel	6
Applications	9
Block Diagram	10
Specifications	11
Service	12
Procedures.....	12
Schematic.....	12
Parts List.....	12
Variations and Options	12
Warranty	12

Unpacking

Although your ECS-6216MS is neither complicated nor difficult to operate, we recommend you take a few minutes to read this brief manual and familiarize yourself with the important information regarding product features, setup and operation.

As with most electronic devices, we strongly recommend you retain the original packaging. In the unlikely event the product must be returned for servicing, the original packaging (or reasonable equivalent) is required.

Installation

Environment

Never place this product in an environment which could alter its performance or reduce its service life. Such environments usually include high levels of heat, dust, moisture, and vibration.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Features

- COMPREHENSIVE SYSTEM

It is the system which has RELAY GROUP, SPEAKER SELECTOR, TERMINAL BOARD functions.

- AUTOMATIC FIRE DETECTING FUNCTION

It sends the fire warning automatically with the channel by the fire contact point signal of 16 channels interlocking with PX-6216.

- MANUAL BROADCAST CONTROL

It can control the broadcasting of the channel you want by controlling the switches on the front side.

- CONTROL THE 3 LINE TYPE SPEAKER TRACK

It consists of the channels for the common and emergency broadcastings to make 3 line type broadcast possible.

- RS-485 COMMUNICATION AND CHANNEL EXPANSION

Long distance transmission is possible and it can be expanded to 160 zones by connecting ECS-6216MS.

- INSTALLATION TIME AND SPACE

It is the comprehensive system and installation is easy. Installation time and space can be saved.

Equipment Setup and Inspection

1. Setup the Equipment Number



- 1) Setup the equipment number in accordance with wiring conditions by using rear panel DIP switch.
- 2) Setup method is shown in below table, and number on the ON switch will be the equipment number.


DIP Switch	1	2	3	4	5	6	7	8	9	10
Equipment No.	1	ON								
	2		ON							
	3			ON						
	⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮
	10									ON

⚠Caution: Zone display LED will blink if equipment number is not set.
 Communication will not be available if equipment numbers are duplicated.
 Check the equipment number setting in above case.


- 3) Zone allocations of set equipment are as follow.

Equipment No.	1	2	3	4	5	6	7	8	9	10
ZONE Allocation	1~16	17~32	33~48	49~64	65~80	81~96	97~112	113~128	129~144	145~160

2. TERMINATION Switch (LOAD/OPEN) Setting

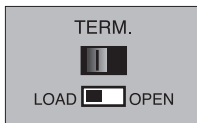


- 1) Termination switch on the rear panel should be set (Load/Open) to stabilize the data transfer in case of the system linked by using RS-485 communication.
- 2) Setup the termination switch to LOAD in the equipment which link is started first time and equipment which link is ended. Setup the other equipment to Open.

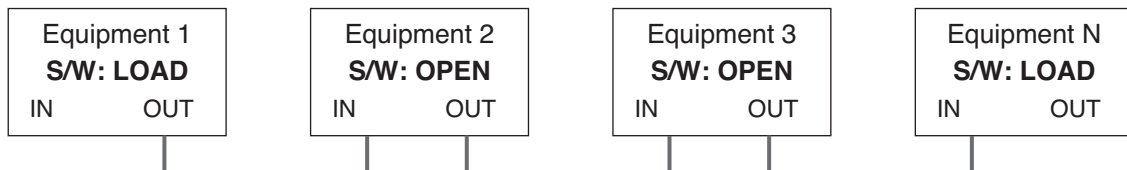

⚠Caution: Communication error may occur if setup is wrong.


Front Panel

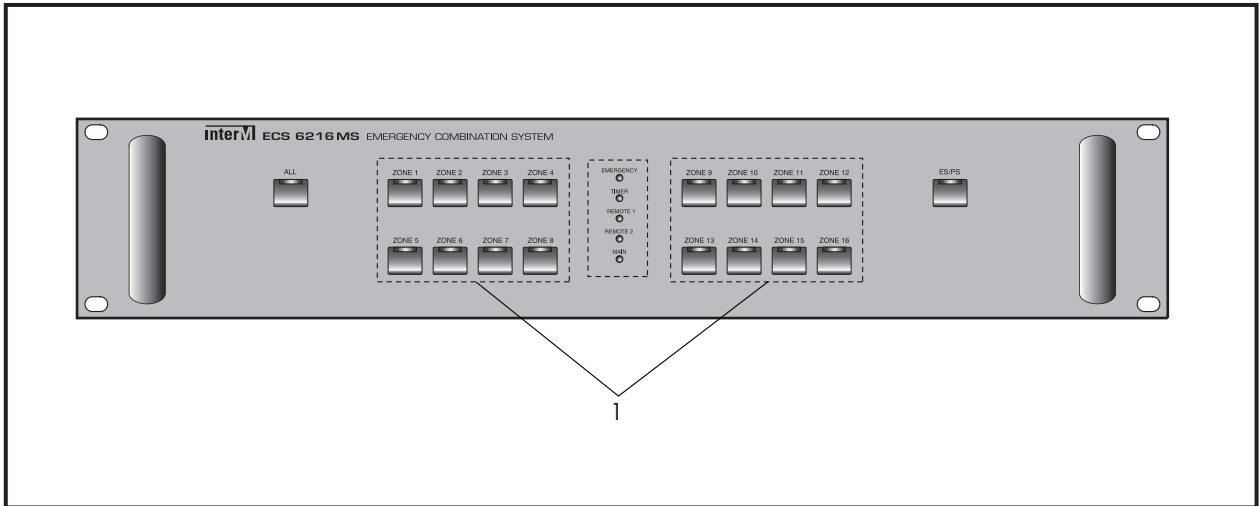

1. SPEAKER ZONE SELECT BUTTON AND DISPLAY (1~16)

LED will be on the zone selected by the button which selects the individual broadcasting zone.
 For emergency broadcast (ES), red light will be on and green will be on for the common broadcast (PS).
 The zone broadcast can be selected only if more than 1 zone in the same bus is being broadcasted.
 (Refer to system operation manual)

Rear Panel

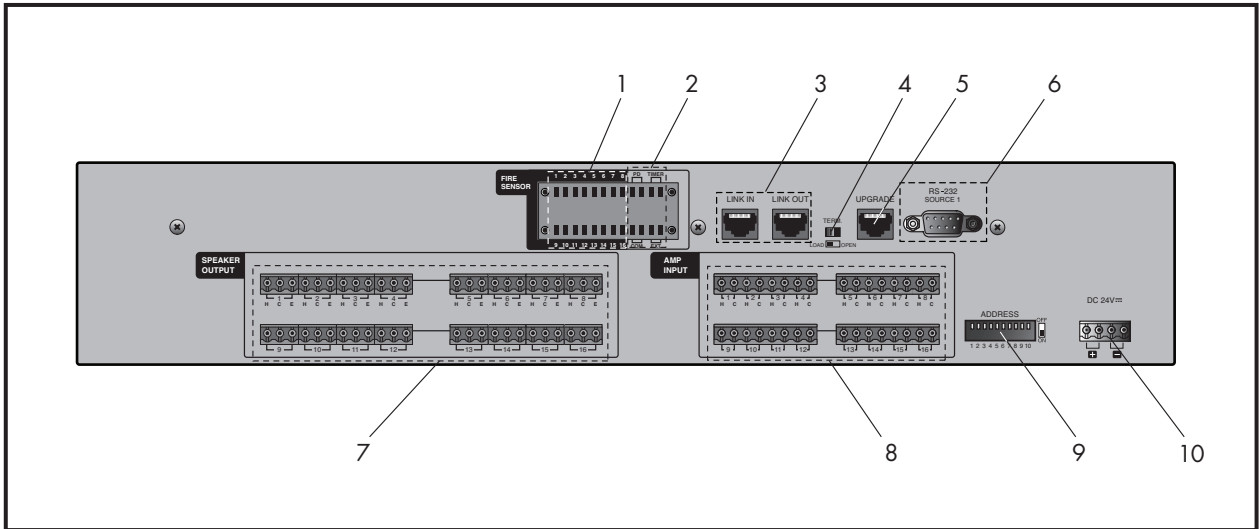

1. FIRE SENSOR INPUT TERMINAL

It is the terminal connected to the sensor output in the fire receiving panel and sends the emergency and evacuation broadcasting to the zone.

 
- 1) Through the macro function, broadcasting zones can be memorized for each input channel.
However, it can be set in only Windows program and set information is downloaded from PC to PX-6216 and saved in the internal memory of PX-6216.
- 2) Maximum 160 zones can be selected and memorized in one input channel.
- 3) For example, if you want to select and memory the zone 1, 2, and 3 into number 1 channel, and if fire sensor in number 1 channel is on, emergency broadcasting will be transmitted to number 1, 2, and 3 zones in a same time.

2. PD, COM TERMINAL

- 1) It is the contact point output terminal used for controlling the operations of the power distributor.
If speaker zone is on or there is no fire sensor input, contact point will be output.
It is connected with REMOTE SW terminal of the power distributor.
- 2) Com Terminal
It is connected to COM terminal of fire receiving panel.

3. LINK IN/OUT TERMINAL

Link In terminal is connected to previous equipment and Link Out terminal is connected to next equipment.



PIN NO.	Functions
1	RS-485 Data - A
2	RS-485 Data - B
3	RS-485 Data - Z
4	NA
5	GND
6	RS-485 Data - Y
7	NA
8	NA

4. TERMINATION SWITCH (LOAD/OPEN)

It is the switch to be set for stabilized data receiving and transmitting of link in/out. Please refer to Equipment Setting and Inspection (Page 3) for detail information.
 ?Caution: Communication error may occur if setup is wrong.


5. UPGRADE TERMINAL (ISP)

It is the terminal to upgrade the software of the equipment and is not used generally.

6. VOICE FILE CONTROL TERMINAL

It is the communication terminal to be used for controlling our company's voice file equipment on Windows program.

- 1) Connectable Source Equipment: products which have RS-232 communication terminal
- 2) Maximum communication distance is about 12 meter.
- 3) PIN OUT Specification

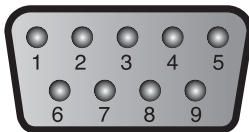

Pin No.	1	2	3	4	5	6~9
Purpose	Not Used	Receive	Transmit	Not Used	Ground	Not Used

7. SPEAKER OUT TERMINAL

It is the terminal which connects the channel speaker. It consists of 3 line type.
 1) In PS mode, it is output only from HOT terminal.
 2) In ES mode, it is output from both HOT/EM terminal.

8. AMP IN TERMINAL

It is the terminal connected to amp output.

9. ADDRESS SETTING SWITCH


It is the switch to setup the system roles if equipment is expanded and interlocked. Please refer to Equipment Setting and Inspection (Page 3) for detail information.

10. POWER INPUT TERMINAL


It is the power input terminal. Caution to polarity and connect DC 24V.

If it is connected with PD(POWER DISTRIBUTOR), connect it to UNSWITCHED Terminal.

Applications

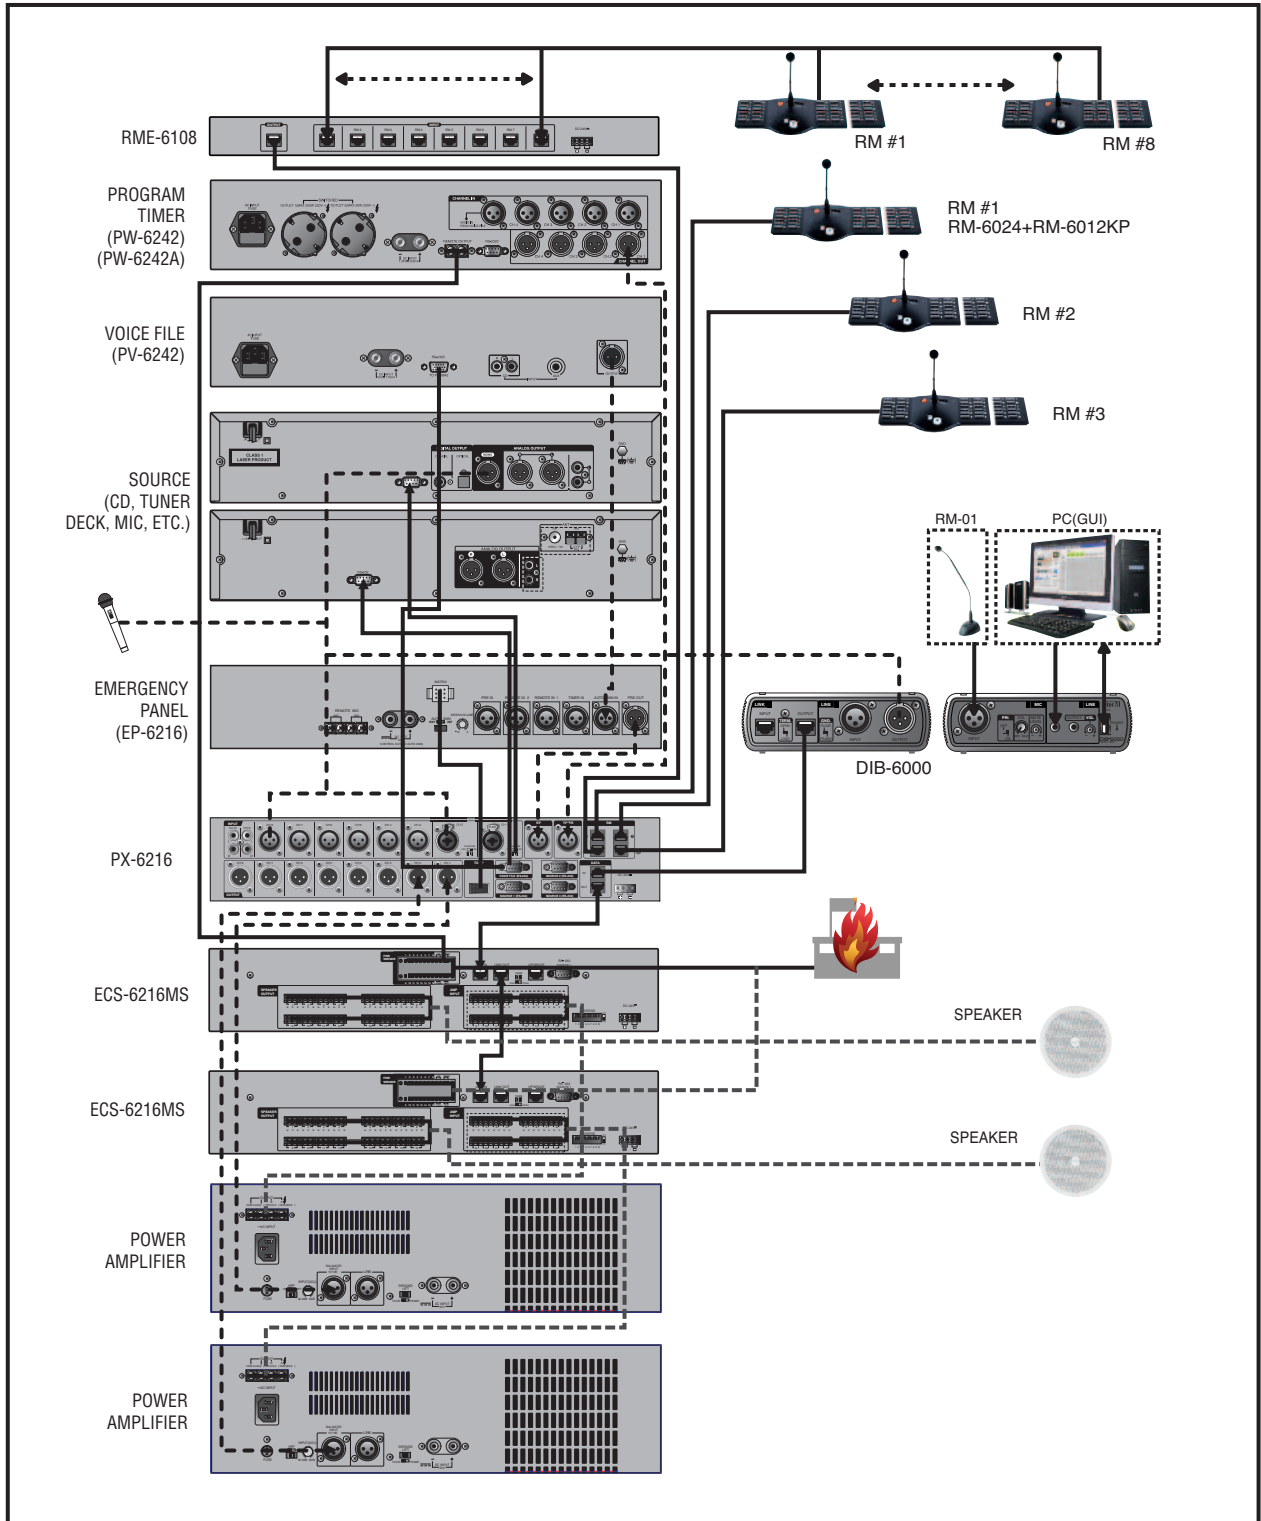

Block Diagram

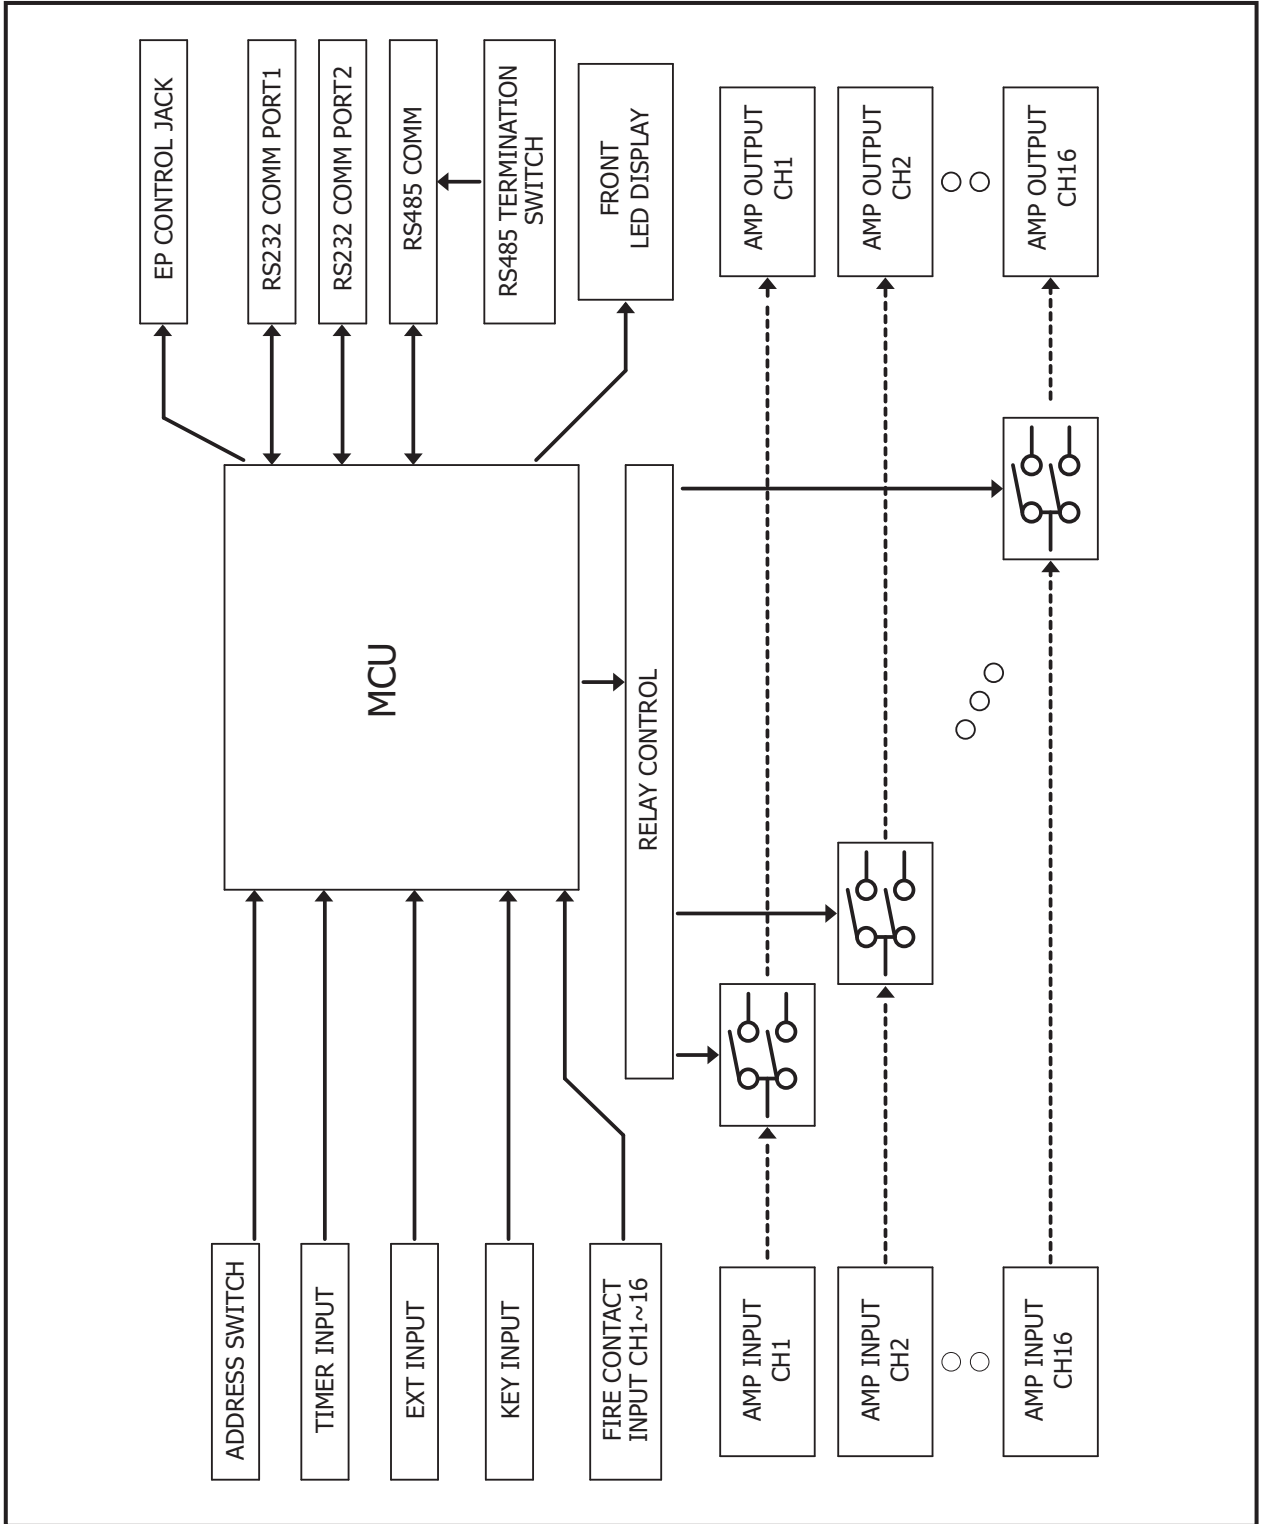


Specifications

		ECS-6216MS
Channel		16CH
Communications Protocol	LINK IN/OUT	RS-485 (1km)
	Source & Voice File	RS-232 (12m)
Fire Sensor		Dry Contact
Operating Temperature		-10°C ~ +40°C/14°F~104°F
Power Source		DC 24V, 600mA
Weight (Set)		4.3kg/9.5lbs
Dimensions (Set)		482(W)x88(H)x280(D)mm/19(W)x3.5(H)x11(D)in

? Specifications and design are subject to change without notice.

? DIMENSIONS

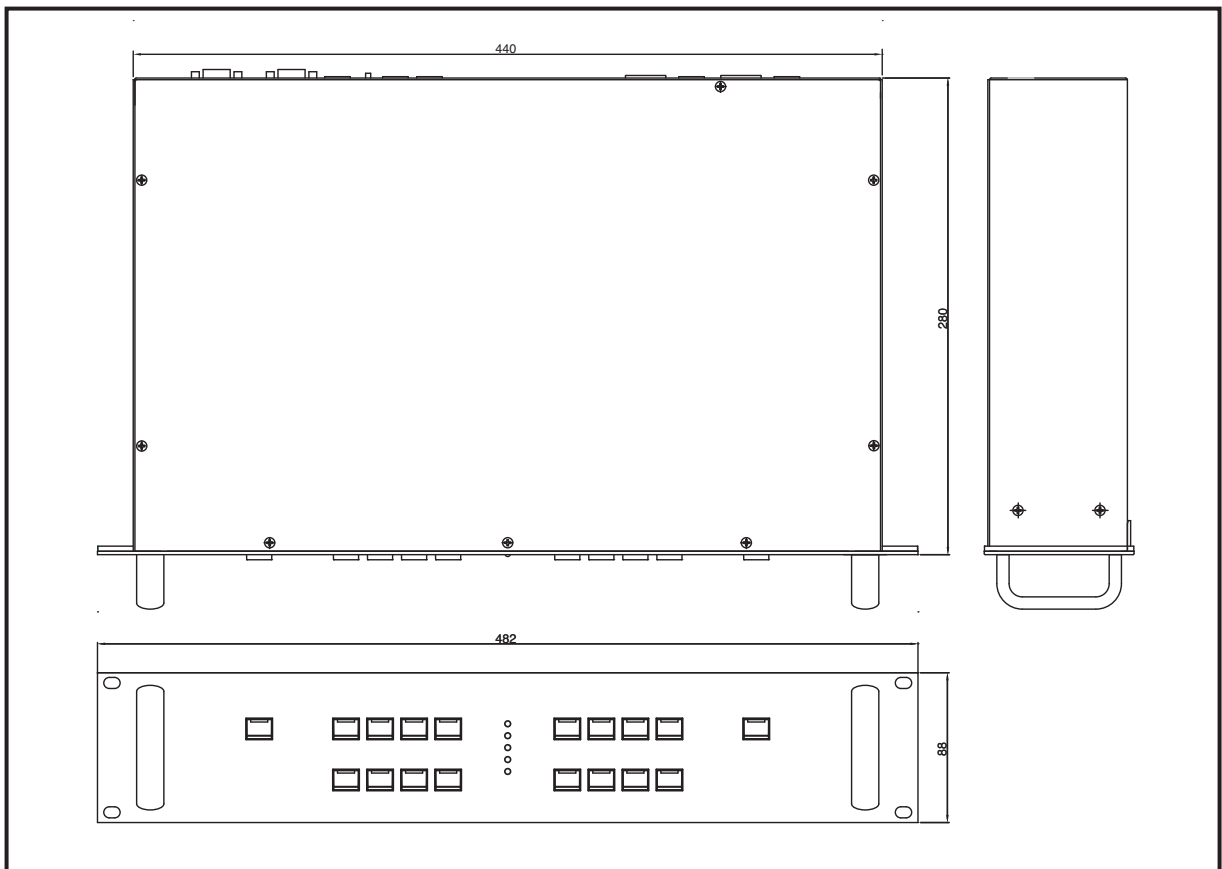

Service

Procedures

Take steps to insure the problem is not related to operator error or other products within the system. Information provided in the troubleshooting portion of this manual may help with this process. Once it is certain that the problem is related to the product contact your warranty provider as described in the warranty section of this manual.

Schematic

A Schematic is available by contacting your warranty provider.

Parts List

A Parts List is available by contacting your warranty provider.

Variations and Options

Variations

Variations of this product exist to reflect the variations in AC power requirements throughout the world. Product supplied through local sources are compatible with local AC power requirements.

Options

No optional items are available for this product.

Warranty

Warranty terms and conditions vary by country and may not be the same for all products. Terms and conditions of warranty for a given product may be determined first by locating the appropriate country which the product was purchased in, then by locating the product type.

To obtain specific warranty information and available service locations contact Inter-M directly or the authorized Inter-M Distributor for your specific country or region.

interM



Inter-M, Ltd. (Korea) began operations in 1983.

Since then, Inter-M has grown to become one of the largest manufacturers of professional audio and commercial sound electronics equipment in the world.

Inter-M has gained worldwide recognition for its own branded products, as well as private label manufacturing of electronics sold under other names (OEM).

The company is no longer just a Korean company, but rather a global company that is truly international in scope, with factories and offices in Korea and China, and sales and marketing operations located in Japan, Europe, and the U.S.A.

With more than 850 employees around the globe, Inter-M is well-poised for further growth and expansion.

Inter-M Americas, INC.

13875 ARTESIA BLVD. CERRITOS, CA 90703 USA
TEL : +1-562-921-0313, FAX : +1-562-921-0370
Home Page : <http://www.inter-m.net>, E-mail : info@inter-m.net

Inter-M Corporation

SEOUL OFFICE: 653-5 BANGHAK-DONG, DOBONG-KU, SEOUL, KOREA
TEL : +82-2-2289-8140~8, FAX : +82-2-2289-8149
Home Page : <http://www.inter-m.com>, E-mail : overseas@inter-m.com

MADE IN KOREA
December 2012 129771